


Firmware version check procedure --- Step 1

Model	Factory Mode
L32 Series	Hold Ch+&Ch- on keypad and power on with keypad (On the right bottom of OSD will appear "F")
L37 Series	Hold Ch+&Ch- on keypad and power on with keypad (On the right bottom of OSD will appear "F")
VX20/VX32/ VX37HDTV10A/VX42/ VP42HDTV20A/ VW32/NW37/NW42 JV50/GV42LFHDTV10A/VU42	Push Menu on remote and then push Vol-&Input on keypad to enter
P50HDM/P50HDTV10A/GV46	Press Ch-&Ch+ button together once on keypad
VX37/GV42/L42/ VP42HDTV10A/VP50	Press Menu, then hold Ch-&Ch+ buttons on keypad while holding on Menu button on remote until Factory mode shows up
P42	Hold Ch+&Ch- on keypad and power on with keypad (On the right bottom of OSD will appear "F")
VM60P	Press "Info" on remote then Right Arrow, Down Arrow, Left Arrow, Up Arrow, Right Arrow (It will show "Enter Factory Mode," then press Menu there will be an "F" on top right of the OSD)
GV47	Press "Menu" then "Info" then "8" "2" "0" "6"


Firmware version check procedure --- Step 2

For some models, needing to turn on the user manual.

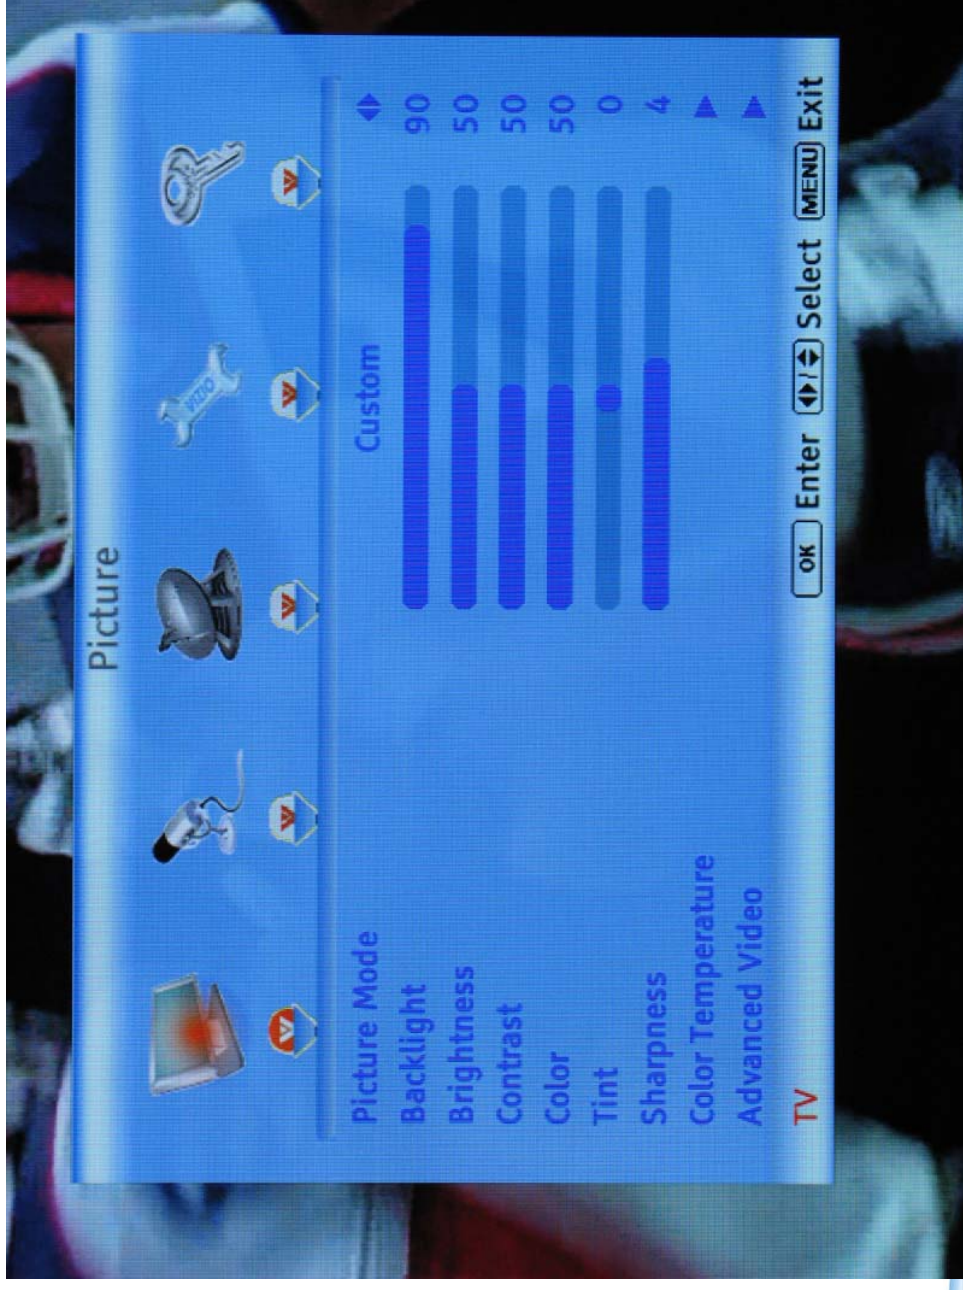

Firmware version check procedure --- Step 3

After holding the hotkeys, the factory will be jumped out, and selecting the Version Info.

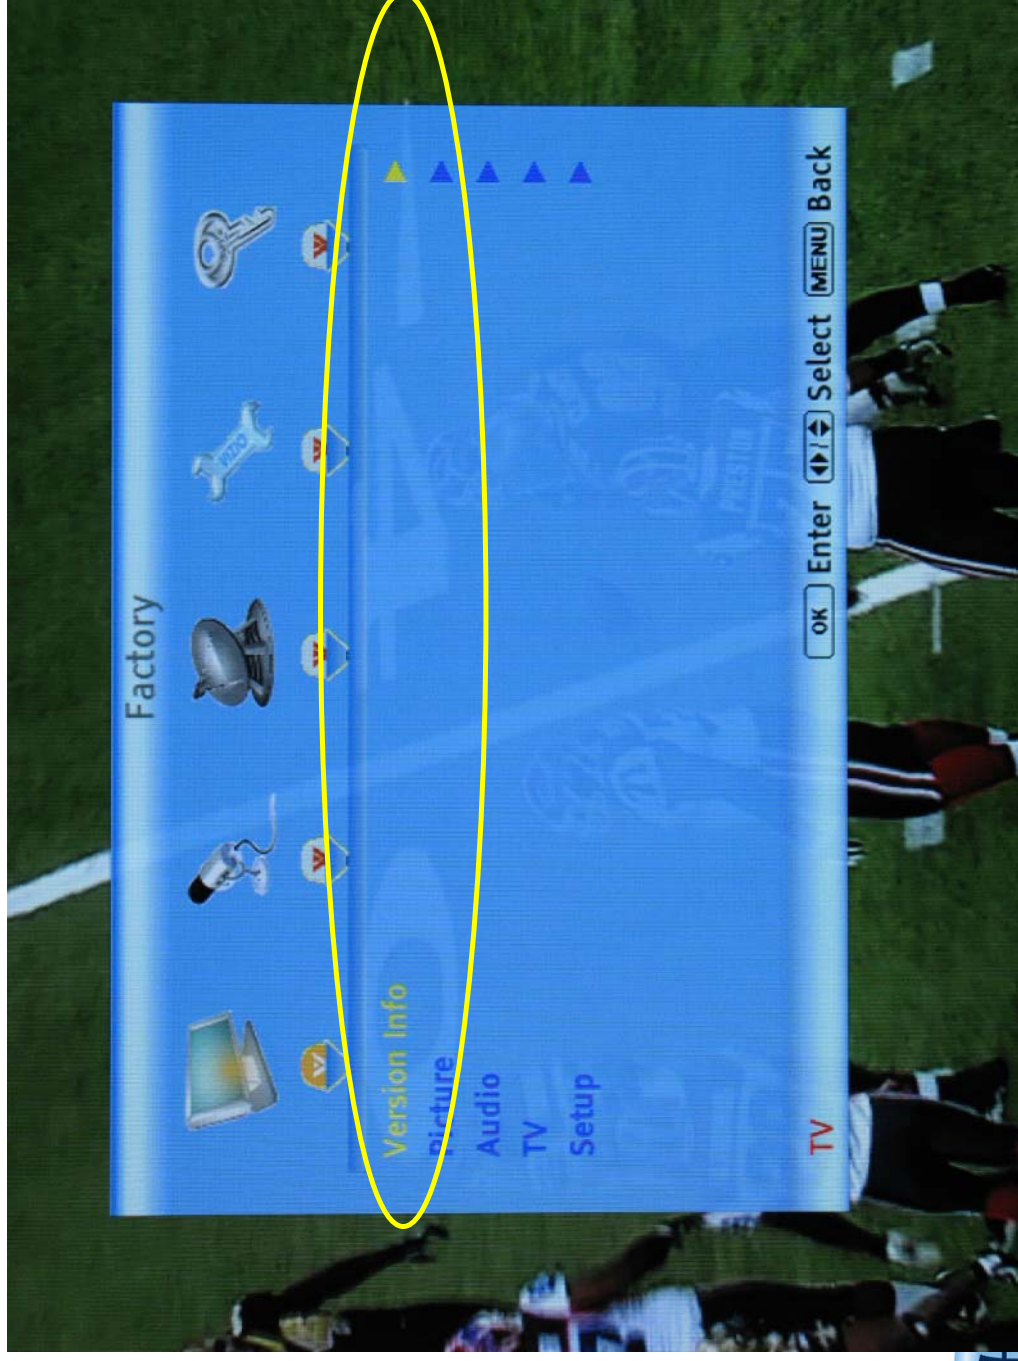

Firmware version check procedure --- Step 4

Please check the model and firmware version to make sure it is the latest version.

